


4173-GB

WIRELESS REMOTE CONTROL

The 4173-GB is a remote control transmitter for use with the FM4000 control panel. Providing remote arming, disarming and portable Panic facility.

The green LED indicates battery status. If the LED does not illuminate when operated replace the batteries as soon as possible.

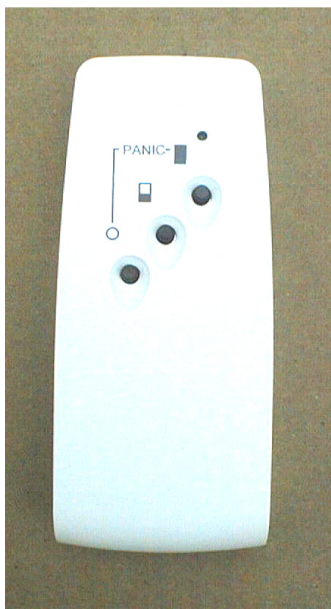

Button Operation



DISARM Press the left hand Off button for one second



PART ARM Press the central Part arm button for one second



FULL ARM Press the right hand Full arm button for one second

PANIC Press both the Off and Full buttons simultaneously for one second

LEARN When programming into the FM4000 Control panel a learn is sent by operating Panic.

RECOMMENDED BATTERIES Two 20mm 3v Lithium cells CR2032 (Available from FM Electronics)

TO REPLACE THE BATTERIES

1. Press and slide off the battery cover.
2. Pull back the spring contact and tip the batteries out
3. Fit the new batteries one at a time ensuring that the +ve side is uppermost.
4. Check operation of the LED
5. Replace the battery cover.



ADDING A REMOTE CONTROL TO THE FM4000E CONTROL PANEL

1. Enter the control panels engineer mode, default engineer code 4679. (The alarm LED will illuminate to indicate that you are in engineer mode.)
2. Key in 11 (if using **FM4000EN, X, or Xtra** panel, Key in 111 for the 1st device, 112 for the 2nd, 113 for the 3rd etc. A maximum of 8 devices can be learnt to any panel.)
3. Transmit PANIC from the remote control (Off & Full)
The panel will bleep twice and zone 1 LED will illuminate to indicate that one remote control is programmed onto the system. The number of zone LED's indicates how many and where remote controls are programmed onto the system.
(To remove remote controls from the panel, see panel manual.)
4. Press the Full Set key to accept
5. Key in 48 to exit engineer mode.

